501-123 Half Moon Rung Climber

Page 1 Rev: 08/18/2005

Please retain this instruction sheet in your files. It contains important replacement parts information. All equipment should be installed in accordance with these instructions.

It is important to use and maintain all public playground equipment properly. Playground equipment, which is improperly maintained, can cause serious injury. Periodical inspections, maintenance, repair and/or replacement of damaged parts is necessary for safe operation of equipment and safety of users. Resilient surfacing should be used under all playground equipment. Appropriate publications, available at no charge, from the Consumer Product Safety Commission, include "A Handbook for Public Playground Safety." You can receive your free copy by calling 1-301-504-7908



Climber is 6' high from the top of the resilient surfacing to the underside of the highest point. It is 9'2" wide on center and rungs are 22" wide on center.

	PACKING LIST					HARDWARE BAG			
1	-	CTN Hardware Box			4	196-807		x 3/8" Socket Set Screw	
1	WF	503-123	Half Moor	n Rung Climber	1	416-350	3/16″	Socket Key	
					4	503-124	Anchor	r c	
					1	805-532	Warnir	ng Label	
1					1	805-534	Sports	sPlay Label	
					1		Mainte	enance Checklist	
		1 CTN	1 WF	TOTAL PCS	= 1 SKI	D W	/T 285#	CLASS 60	
		SportsPlay 1	Equipment,	Inc. 5642 Natural www.sport	•		MO 63120	0 314-389-4140	


501-123 Half Moon Rung Climber

Page 2 Rev: 08/18/2005

GENERAL USE/FALL ZONE & FOOTING RECOMMENDATIONS

Stationary and portable equipment - use/fall zones should extend a minimum of 6 feet in all directions from the perimeter of the equipment ground space. This area should be covered with the required amount of resilient safety surfacing material. For some equipment - use/fall zones can overlap. See Consumer Product Safety Commission guidelines. Diameter and depth of footings illustrated are satisfactory in most applications for pipe sizes up to 2 3/8" diameter. Varying soil and climatic conditions may require deeper and heavier footings in some areas. Check local building codes.

Permanent Installation: Upright

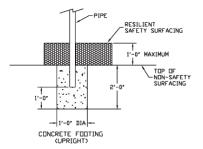

1/2"X 8"BOLT VOT FURNISHED VOT FURNISHED


> ∠ ⊼ 4 WOOD BOARD NOT FURNISHED TYP 2 PLC

Suggested Bracing Method

*If resilient surfacing is to be less than 12", then additional pipe should be put in concrete to maintain proper finish grade for equipment.

USE AREA & FOOTING LAYOUT:

Use/Fall: 13'10" deep x 21'2" wide

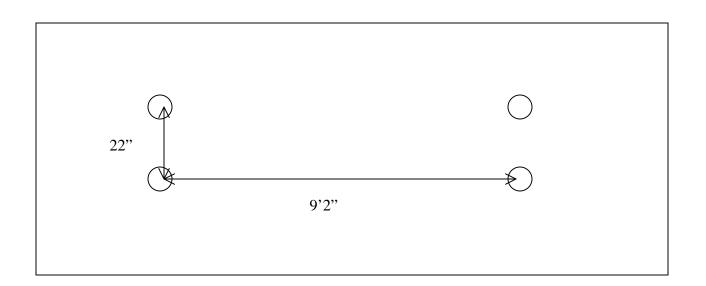

SportsPlay Equipment, Inc. 5642 Natural Bridge, St. Louis, MO 63120 314-389-4140 www.sportsplayinc.com

501-123 Half Moon Rung Climber

Page 3 Rev: 08/18/2005

GENERAL ASSEMBLY INSTRUCTIONS

Check all parts and hardware with the packing list to be sure you have received everything needed to assemble this product. Contact your local distributor with notification of any missing or damaged parts. Contact must be made within ten (10) days of receipt of your order.

Only hand-tighten nuts and bolts on initial assembly. Final tightening should be done evenly after final assembly when unit has been plumbed and leveled. After assembly is complete, any ends of bolts protruding beyond nuts should be cut off and/or peened over to remove any sharp projections. Go over entire unit to file smooth any sharp edges or projections that may have been caused by rough handling in shipping or installation.

GENERAL MAINTENANCE INSTRUCTIONS

Check monthly for loose bolts, damaged or broken parts. Tighten and/or replace immediately.

ASSEMBLY AND INSTALLATION:

- NOTE: All threaded ends of bolts protruding beyond nuts must be cut off and/or peened to eliminate sharp edges. No more than two threads should extend beyond face of nut. All washers, "T" nuts, and other fastener hardware used on round pipe or tubing must be hammered down to conform to the curved underlying surface to eliminate catch points. DO NOT tighten nuts more than hand-tight until entire assembly is completed.
- STEP #1: Lay out all parts in the desired location
- STEP #2: Stand climber where you want to install it and mark the leg positions according to the dimensions on page 1.
- STEP #3: Dig holes 2'deep, install the sleeves in cement and brace, making sure to keep distances accurate.
- STEP #4: Let cement cure 48 hours.
- STEP #5: Slip climber over the sleeves
- STEP #6: Tighten set screws in weld nuts located at the bottom of the climber.
- STEP #7: Attach Warning Label and Manufacturer's Identification Label to a clean surface. The labels should be attached in a location where they are clearly visible and legible and away from normal hand and foot placement areas. The labels must be replaced if they become illegible, destroyed or are missing. Contact your SportsPlay distributor for replacement labels.

SportsPlay Equipment, Inc. 5642 Natural Bridge, St. Louis, MO 63120 314-389-4140 www.sportsplayinc.com